



-INSTALLATION- INSTRUCTIONS

LACHUTE PERFORMANCE
MUFFLER DELETE

SUBARU CROSSTREK 2018-2020

CONGRATULATIONS FOR YOUR NEW LACHUTE PERFORMANCE MUFFLER DELETE!


If you have any questions or need assistance
during the installation please
contact our team. You
can find the information
on the last
page.



IN
THE
BOX



IN THE BAG

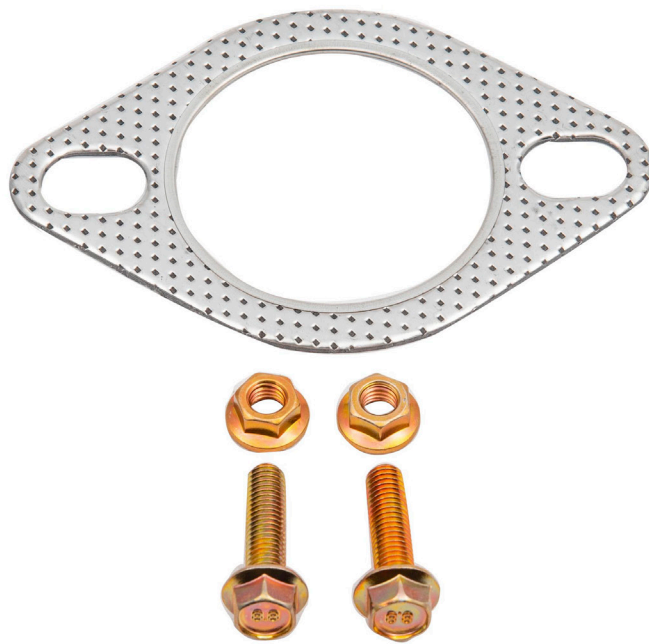





NECESSARY TOOLS

- We recommend the use of a lift
- Ratchet
- 14mm Socket
- 14mm wrench

1

REMOVE BOLTS

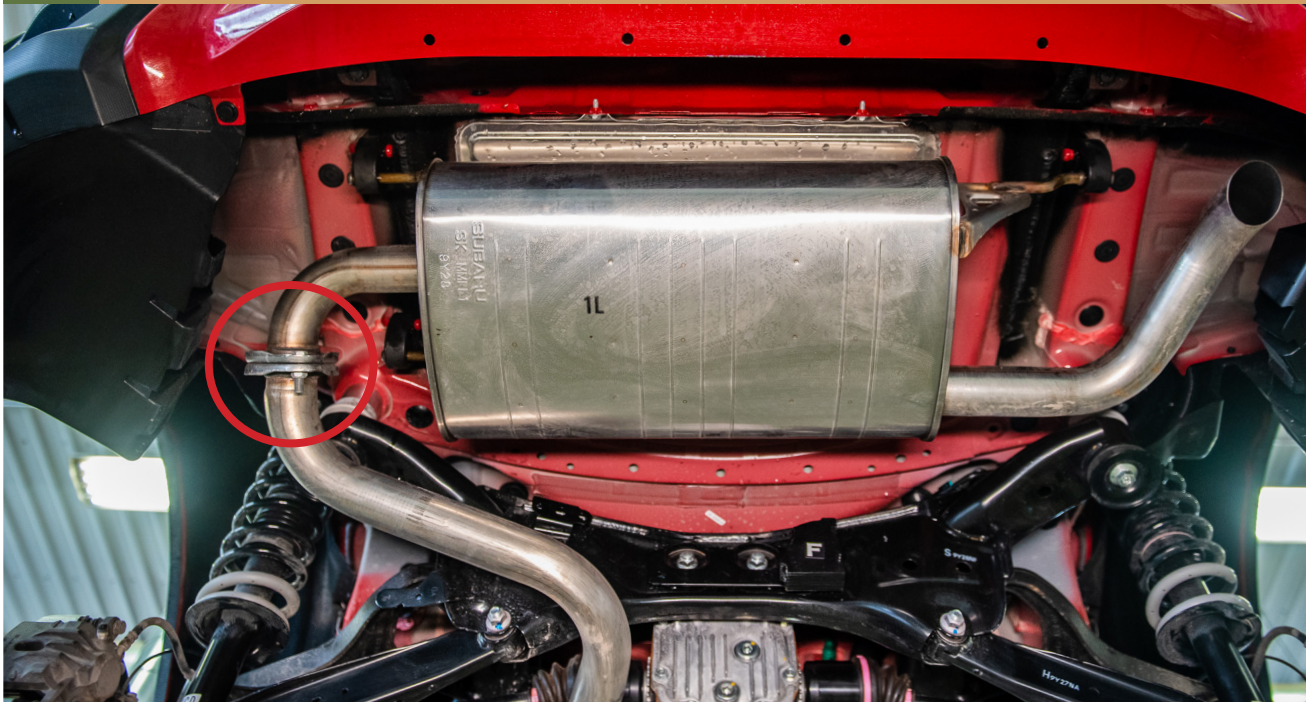

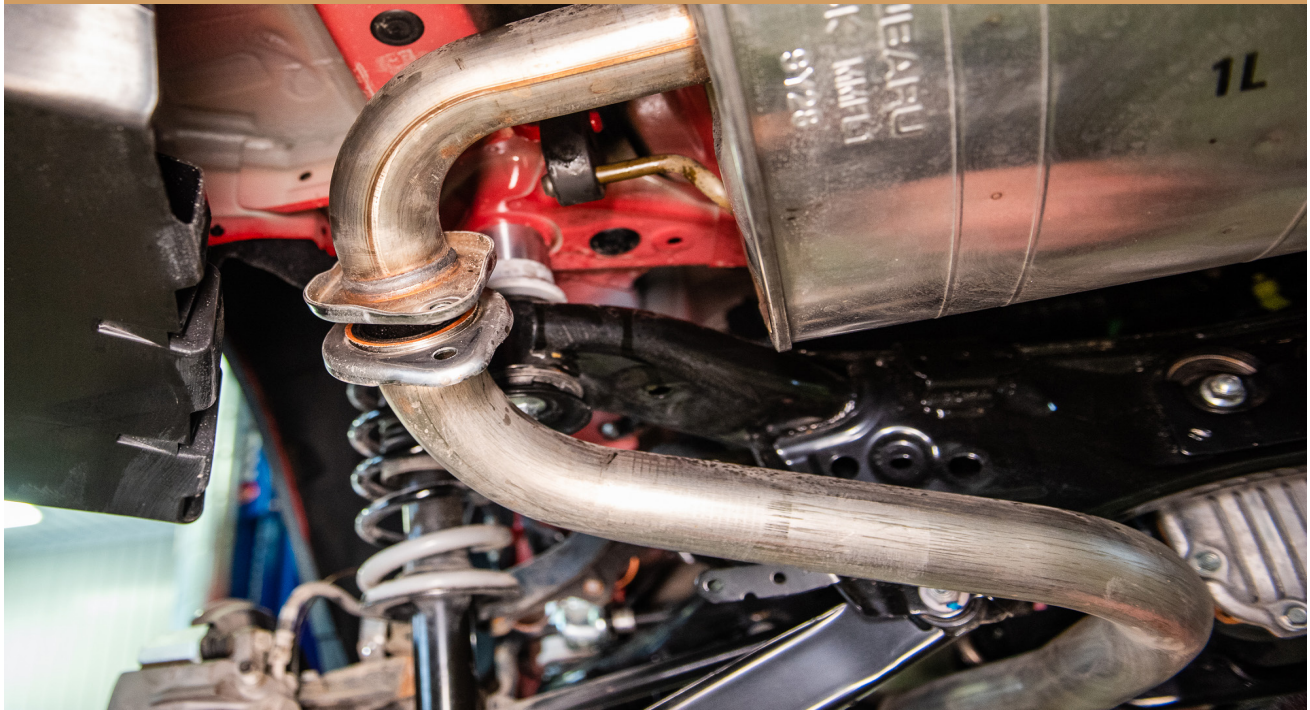

2

REMOVE FACTORY MUFFLER BY UN HOOKING
IT FROM THE MUFFLER HANGERS





3

INSTALL THE MUFFLER DELETE INTO
THE MUFFLER HANGERS





4

ATTACH THE MUFFLER DELETE USING THE SUPPLIED GASKET AND BOLT





INSTALLATION COMPLETE!





NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-prod->**



You have completed the installation.
Thank you for your interest
in our products.

For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316

We are available Monday to Friday
Between 8AM and 5PM (EST).

Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!