



SUBARU FORESTER 2014-2018

# CONGRATULATIONS FOR YOUR NEW LP AVENVENTURE BUMPER GUARD!

If you have any questions or need assistance during the installation please contact our team. You can find the information on the last page.

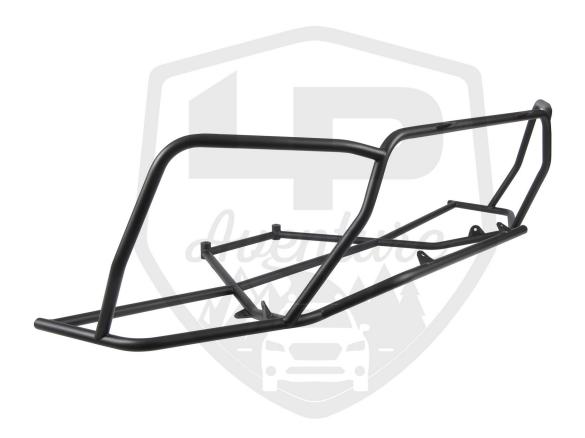

### IN THE BAG

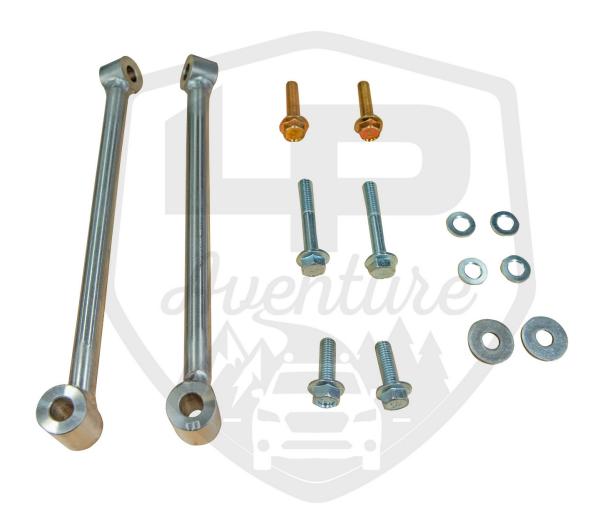


#### **NECESSARY TOOLS**


- We recommend the use of a liftv
- Jack
- -Ratchet
- 14mm Socket
- 19mm Socket
- 22mm Socket


### INSTALL BUMPER GUARD SUPPORT RODS



### **REMOVE BOLT**

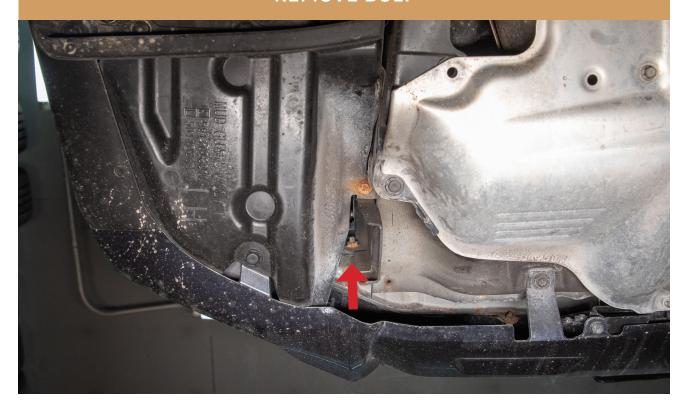

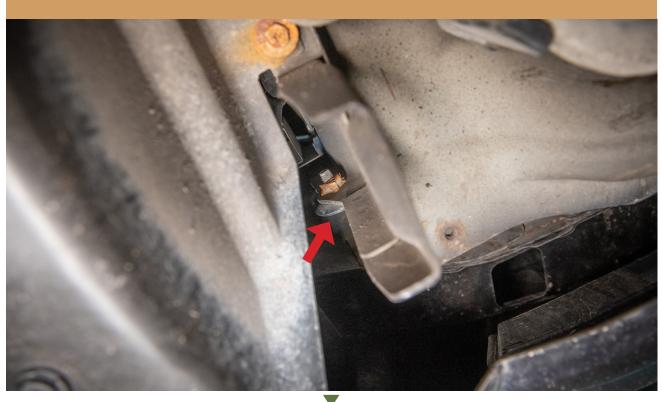

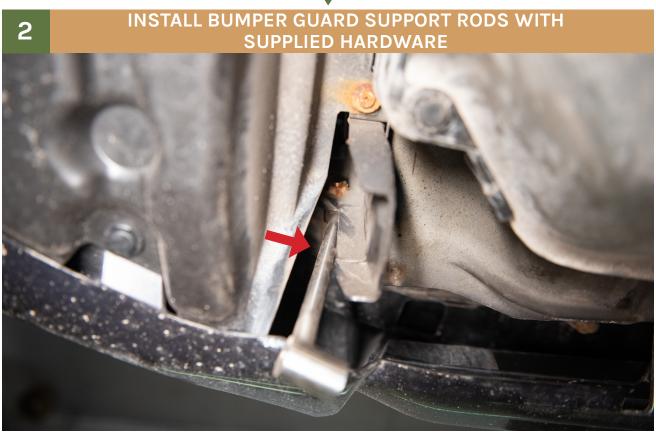

# MAKE SURE YOU INSTALL THE CORRECT SUPPORT ROD ON THE CORRECT SIDE OF THE VEHICLE




#### WIDE END POINTS TOWARDS THE CENTER OF THE VEHICLE



### 3 REMOVE TRANSMISSION SUPPORT BOLTS



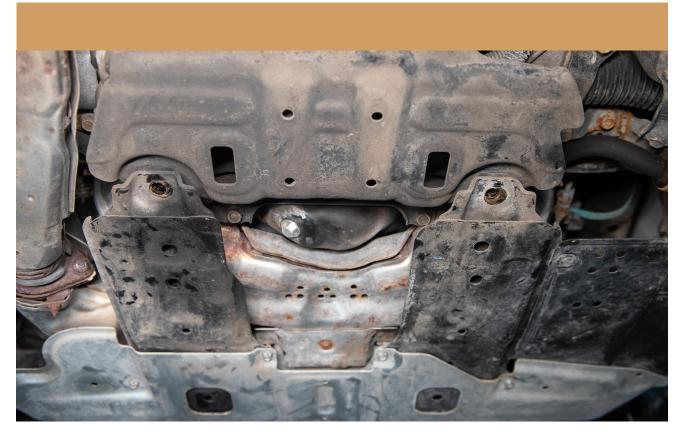

# 4 USE A JACK WITH A PIECE OF WOOD TO HELP SUPPORT THE BUMPER GUARD DURING INSTALLATON



### 5 RAISE BUMPER GUARD INTO PLACE



### FASTEN THE REAR OF THE BUMPER GUARD WITH THE SUPPLIED HARDWARE



### 7 ALIGN THE BUMPER GUARD WITH ITS SUPPORTS RODS




### 8 USE SUPPLIED HARDWARE TO ATTATCH BUMPER GUARD TO SUPPORT ROD





# 9 MAKE SURE THE BUMPER GUARD IS PLACED OVER THE FENDER COVER




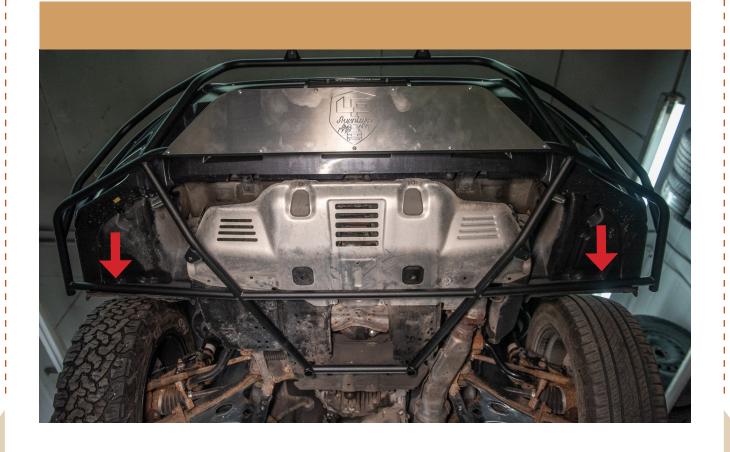

10 TIGHTEN ALL THE BOLTS



### **INSTALLATION COMPLETE!**

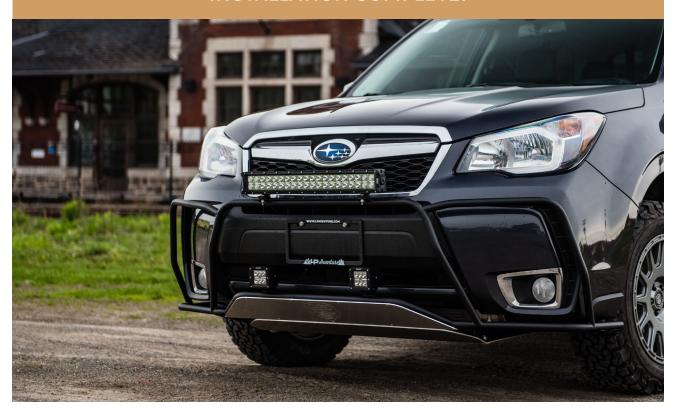

#### **NOTES:**

\*\*Tighten all the bolts to the manufacturer's specifications with a Torque Wrench\*\*

Double check your work.
Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.

Products warnings: https://lpaventure.com/pages/products-warnings

Limited product warranty: https://lpaventure.com/pages/limited-prod-



You have completed the installation.

Thank you for your interest

in our products.

For all requests, information or assistance: Contact our team by phone at 1 (866) 562-1316

We are available Monday to Friday Between 8AM and 5PM (EST).

Or by email at: SALES@LPAVENTURE.COM WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!