


SUBARU FORESTER 2019-2020

CONGRATULATIONS FOR YOUR NEW LP AVENVENTURE MAIN SKID PLATE!

If you have any questions or need assistance during the installation please contact our team. You can find the infomation on the last page.




IN THE BAG

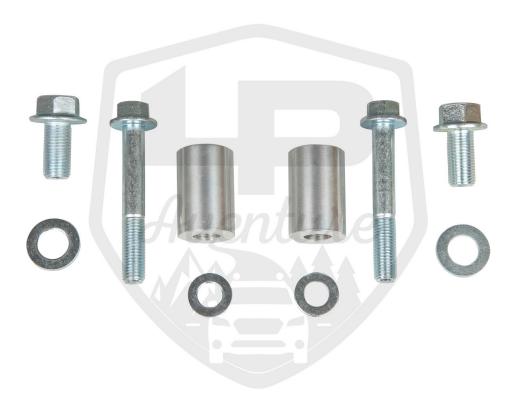


NECESSARY TOOLS


- -We recommend the use of a lift
- -Transmission jack or regular jack
- -Ratchet
- -14mm Socket
- -17mm Socket

1 WITH A LP AVENTURE BUMPER GUARD INSTALLED REMOVE THESE BOLTS FOR THE REAR OF THE SKID PLATE

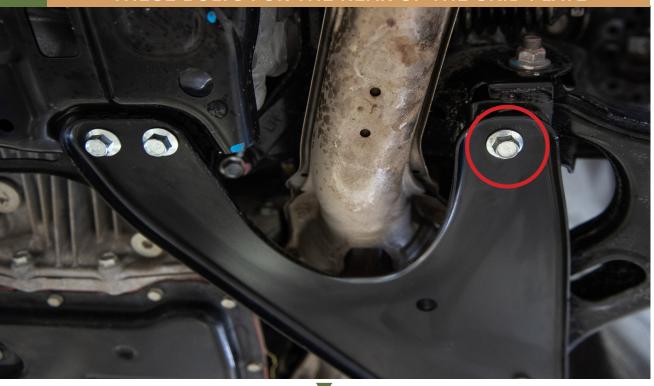




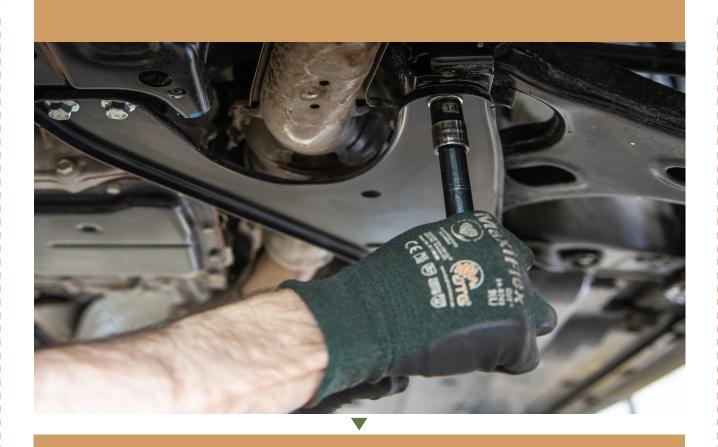


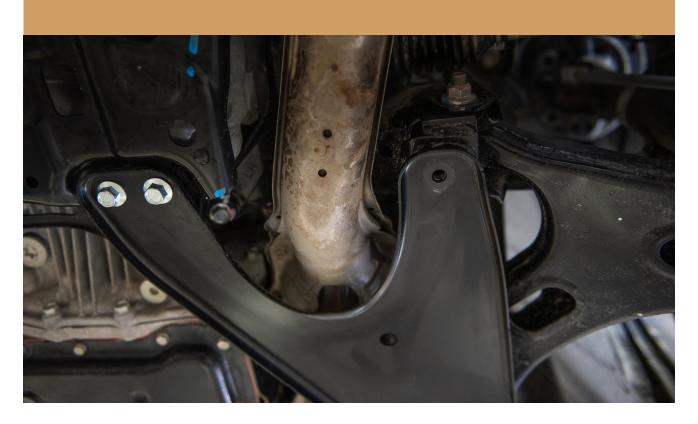

2 USE A JACK AND A PIECE OF WOOD TO HELP STABALIZE THE MAIN SKID PLATE DURING INSTALLATION

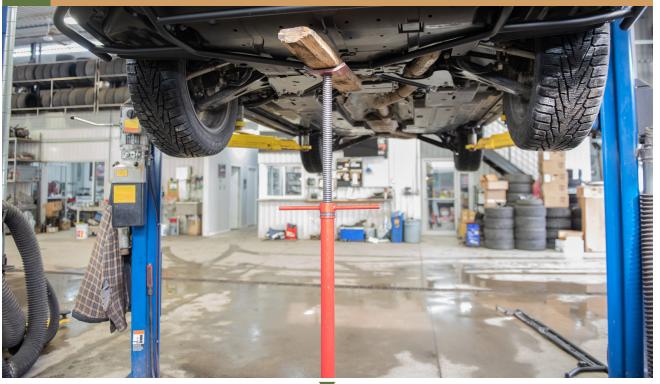

RAISE THE MAIN SKID PLATE INTO PLACE

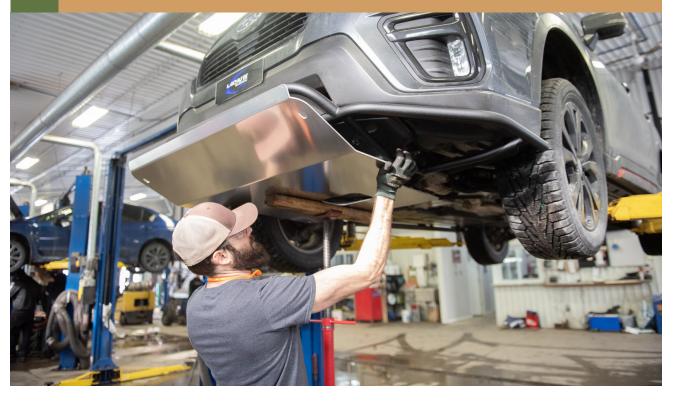













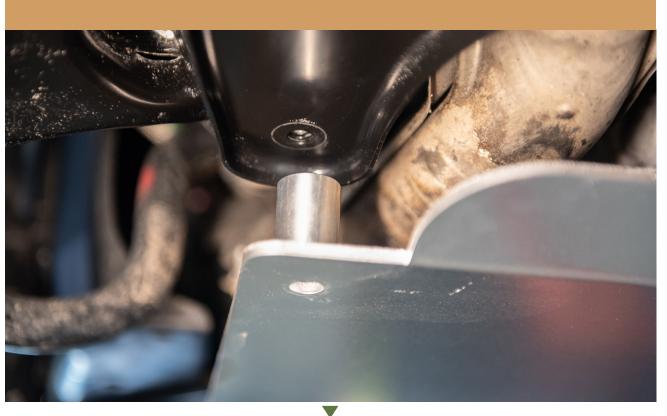

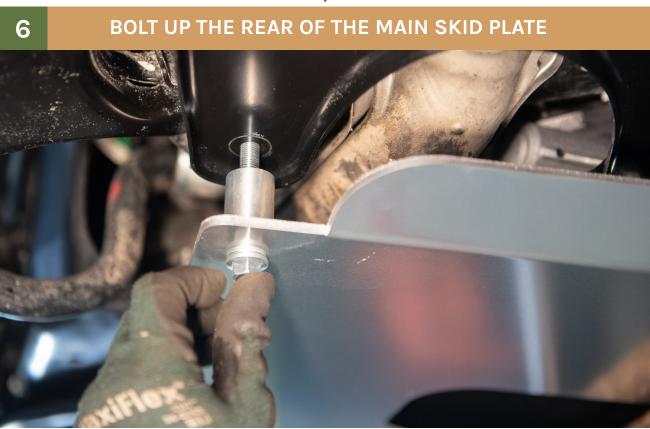

7 TIGHTEN ALL HARDWARE



8 INSTALLATION COMPLETE!



NOTES:

Tighten all the bolts to the manufacturer's specifications with a Torque Wrench

Double check your work.

Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.

Products warnings: https://lpaventure.com/pages/products-warnings

Limited product warranty: https://lpaventure.com/pages/limited-prod-



You have completed the installation.

Thank you for your interest
in our products.

For all requests, information or assistance: Contact our team by phone at 1 (866) 562-1316

We are available Monday to Friday Between 8AM and 5PM (EST).

Or by email at: SALES@LPAVENTURE.COM WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!